





Ergo Edge Wall Mount Installation Instructions

Included Contents:

Wall Bracket
Qty: 1

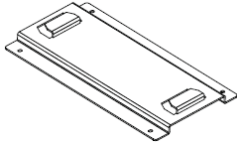


Wall Bracket & Hose
Hanger Screws
(1-1/2" length)
Qty: 6



Wall Bracket & Hose
Hanger Plastic Anchors
(for drywall installation)
Qty: 6



Hose & Tool Caddy
Hanger
Qty: 1

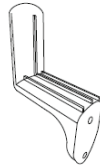

Tool Caddy
Qty: 1



Ergo Edge Installation:

Step 1

Locate an area to hang the wall bracket and mark your 4 holes using the bracket as your guide.

Step 2


Install the wall bracket using 4 of the 1-1/2" screws. Use plastic anchors as well for drywall.

Step 3

Locate an area close to the vacuum to hang the hose and tool caddy hanger (*preferably on the same side as your hose*) and mark your 2 holes using the hanger as your guide. The center distance between the two holes should be about 2-5/8".

**Please note: the vacuum hose can be oriented either left or right of the vacuum by removing the vacuum lid and turning the lid 180 degrees.*

Once installed, the vacuum should look like the below image:

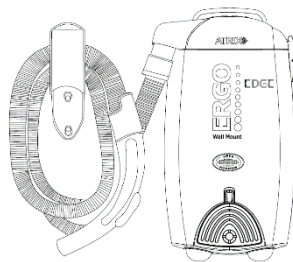

Step 4

Install the hose and tool caddy hanger on the same side as your hose using 2 of the 1-1/2" screws. Use plastic anchors as well for drywall.